

Application List - Rover / Version 9.5.0

Icons Legend

Existing Functionality

Under Development

Functionality does not apply

ABS					
	System	DTCs	Parameters	Actuators	Configurations
	ABS BOSCH (ZT - T / ROVER 75)				
	ABS BOSCH 5.0				
	ABS BOSCH 5.3				
AIRBAG (SRS)					
	System	DTCs	Parameters	Actuators	Configurations
	AIRBAG ACU3				
	AIRBAG ACU3 (CITY ROVER)				
Configurations					
	Driver's Side Airbag				
	Driver's Front Airbag				
	Driver's Pretensioner				
	Inhibit Key				
	Passenger's Side Airbag				
	Passenger's Front Airbag				
	Passenger's Pretensioner				
	Replace Electronic Control Unit (ECU)				
	AIRBAG EC5/RC5				
	AIRBAG TEMIC MRS3 SRS DCU (ROVER 25/45/75)				
Configurations					
	Airbag Initialisation (ROVER 25)				
	Airbag Initialisation (ROVER 45)				
	Airbag Initialisation (ROVER 75)				
	AIRBAG TEMIC MRS3 SRS DCU (ZT-T/ROVER 75)				
Configurations					
	Airbag Initialisation (ROVER 25)				
	Airbag Initialisation (ROVER 45)				
	Airbag Initialisation (ROVER 75)				
ANTI-THEFT ALARM					
	System	DTCs	Parameters	Actuators	Configurations
	ALARMA 5AS 96MY				
Configurations					
	Programming or Resynchronising Plip				
	ALARMA 5AS 98MY				
Configurations					
	Programming or Resynchronising Plip				
	BCU GM6 - SECURITY (ZT-T ROVER 75)				
Configurations					
	Remote Handset Status				
	CCU - ROVER 600				
	SCU - SECURITY (ROVER 25)				
Configurations					
	Alarm Test				
	Alarm Trigger Store				

ECU Test					
EKA Programming					
REMOTE CONTROLS PROGRAMMING Replace Electronic Control Unit (ECU)					
AUTOMATIC GEARBOX					
System	DTCs	Parameters	Actuators	Configurations	
JATCO AUTOMATIC GEARBOX					
CLIMATRONIC CONTROL					
System	DTCs	Parameters	Actuators	Configurations	
ATC (ZT-T / ROVER 75)					
Configurations					
Replace Electronic Control Unit (ECU)					
ELECTRIC SEATS					
System	DTCs	Parameters	Actuators	Configurations	
ELECTRIC SEATS AND MIRRORS (Rover 800)					
ELECTRIC WINDOW WINDER					
System	DTCs	Parameters	Actuators	Configurations	
SCU - WINDOWS (ROVER 25)					
ELECTRONIC DASHBOARD					
System	DTCs	Parameters	Actuators	Configurations	
VDO INSTRUMENT PACK (ZT-T ROVER 75)					
Configurations					
Inspection					
Oil Service					
Time Service					
ENGINE ELECTRONICS (PETROL/DIESEL)					
System	DTCs	Parameters	Actuators	Configurations	
BOSCH EDC 1.3.1					
Configurations					
Immobilizer Code Learning					
DIESEL DDE 4.0					
Configurations					
Immobilisation Learn					
EDC15 INJECTION					
Configurations					
Learn Security Code					
Security Line					
Security Status					
EMS 2000 SIEMENS					
Configurations					
All Adoptions					
Dynamic Trim					
Idle Control					
Knock Sensor					
Mass Air Flow Sensor (MAF)					
Misfire					
Oxygen Sensor					
Stepper Reset					
Throttle Position					
MEMS 1.6					
MEMS 1.9					
Configurations					
Immobilizer Code Learning					
MEMS 2J (PETROL)					
MEMS 3					
Configurations					

<p>Immobilisation Learn Reset All Adoptions to Defaults for New Engine Reset Closed Throttle Position Reset Flywheel Adoptions Reset Fuelling Adoptions Reset Idle Adoptions Set Service Ignition Offset</p>					
EXTERIOR LIGHTS					
System	DTCs	Parameters	Actuators	Configurations	
LIGHT SWITCH (ZT-T / ROVER 75)					
FUEL BURNING HEATER					
System	DTCs	Parameters	Actuators	Configurations	
FUEL BURNING HEATER (ZT-T / ROVER 75)					
<i>Configurations</i>					
Prime System					
Replace Electronic Control Unit (ECU)					
HEATED SCREENS					
System	DTCs	Parameters	Actuators	Configurations	
BCU GM6 - HEATED REAR WINDOWS (ZT-T / ROVER 75)					
IMMobilizer					
System	DTCs	Parameters	Actuators	Configurations	
IMMobilizer EWS2					
<i>Configurations</i>					
Transponder-Key 1 Status					
Transponder-Key 1 Status					
Transponder-Key 10 Status					
Transponder-Key 10 Status					
Transponder-Key 2 Status					
Transponder-Key 2 Status					
Transponder-Key 3 Status					
Transponder-Key 3 Status					
Transponder-Key 4 Status					
Transponder-Key 4 Status					
Transponder-Key 5 Status					
Transponder-Key 5 Status					
Transponder-Key 6 Status					
Transponder-Key 6 Status					
Transponder-Key 7 Status					
Transponder-Key 7 Status					
Transponder-Key 8 Status					
Transponder-Key 8 Status					
Transponder-Key 9 Status					
Transponder-Key 9 Status					
INTERCONNECTION UNIT					
System	DTCs	Parameters	Actuators	Configurations	
CCU ALARMA 5AS 96MY					
<i>Configurations</i>					
Read EKA Code					
INTERIOR LIGHTS					
System	DTCs	Parameters	Actuators	Configurations	
BCU GM6 - INTERIOR LIGHTS (ZT-T / ROVER75)					
SCU - LIGHTS (ROVER 25)					
MULTIFUNCTION DISPLAY					
System	DTCs	Parameters	Actuators	Configurations	
ALPINE BOARD MONITOR (Rover75/MGZT)					
<i>Configurations</i>					
Autotest					
NAVIGATION					
System	DTCs	Parameters	Actuators	Configurations	
PHILLIPS NAVIGATION (Rover75/MGZT)					
<i>Configurations</i>					
Autotest					
PARKING ASSISTANCE					
System	DTCs	Parameters	Actuators	Configurations	
PARKING DISTANCE CONTROLLER (Rover75/MGZT)					

PCM - POWERTRAIN CONTROL MODULE					
	System	DTCs	Parameters	Actuators	Configurations
	EEC V (GENERIC - ALL ENGINES)				
POWER STEERING					
	System	DTCs	Parameters	Actuators	Configurations
	ELECTRIC POWER STEERING (EPAS)				
RAIN / BRIGHTNESS SENSOR					
	System	DTCs	Parameters	Actuators	Configurations
	RAIN SENSOR (ZT-T / ROVER 75)				
SUNROOF					
	System	DTCs	Parameters	Actuators	Configurations
	SUNROOF WEBASTO (ZT-T / ROVER 75)				
VIDEO					
	System	DTCs	Parameters	Actuators	Configurations
	VIDEO MODULE LOWE OPTA (Rover75/MGZT)				
WASHERS & WIPERS					
	System	DTCs	Parameters	Actuators	Configurations
	BCU GM6 - WASH AND WIPE (ZT-T / ROVER 75)				
	SCU - WASH WIPE (ROVER 25)				